

NUNA

PIPA RX




Type: Rear-facing-only
Last date made: Current
First made: 2020
Weight limits: 4 to 32 lbs.
Harness: 5 point harness




Harness: Shoulder straps are attached to a splitter plate behind seat. Pull strap end in front of seat to tighten harness. Push button at lower front of seat and pull on shoulder straps to loosen.


Harness slots: There are three sets of slots. To change shoulder strap slot height, remove straps from splitter plate on back and rethread through desired slots, then reattach to splitter plate. Harness straps must be between child restraint and attachment bar (diagram 1).

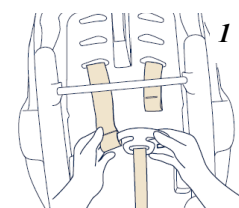

Crotch strap: Adjustable. There are two slots; length is also adjustable. Crotch strap is sewn to a metal anchor which must lie flat against underside of seat. Use position closest to, but not under, child. To change position, turn metal anchor sideways, feed through slot, and insert into desired slot. To shorten length for smaller child, feed metal anchor through inner slot and out through outer slot (diagram 2).

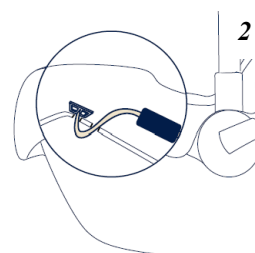

Angle adjustment: Recline adjustment button and indicator are located on both sides of the base (diagram 3). To adjust, push button all the way down and slide installed carrier or top of base into desired position. Use positions 1 or 2 for child weighing 4 to 20 lbs. and positions 3 or 4 for child weighing 21 to 32 lbs. Recline button must pop back up to indicate recline is locked.

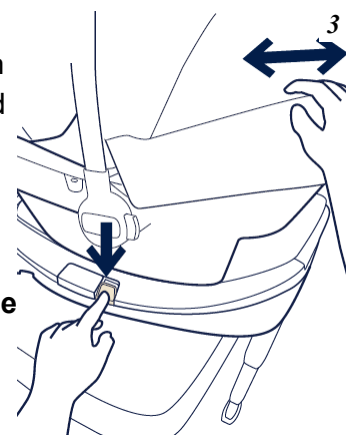

Belt path: If LATCH is not in use, leave connectors rotated in place on side of base (diagram 4). **Do not install restraint using inflatable safety belt.**






SEE PAGE 2

Belt Path:




With base: (cont.) Press release button on bottom of base to release stability leg (diagram 5). Open lock-off and route vehicle belt over base and buckle. Route lap belt under tabs in lap belt path, route shoulder belt diagonally over shoulder belt path under lock-off. If belt comes in contact with positioner on side of base, route belt under positioner (diagram 6). Tighten vehicle belt and close lock-off. Once base is correctly installed, push adjustment button on load leg and extend leg until foot makes contact with vehicle floor. Lock leg into place using first position that firmly locks leg into contact with vehicle floor. Make sure indicator on foot shows green, not red (diagram 7). If load leg lifts base more than 1 inch off the seat, adjust as needed to close the gap. **Load leg may not be used over vehicle floor storage compartment.**

Without base: Lap portion of safety belt is routed through both slots across top of restraint, over child. Shoulder portion, if present, may either be routed through belt guide on back of seat (diagram 8), or may rest against vehicle seat (diagram 9). **The belt guide is NOT a lock-off. You must lock safety belt.** Blue line on side of child restraint must be level with ground (diagram 10); a towel or pool noodle may be used to adjust the recline.

LATCH: Restraint has rigid LATCH connectors. Lower LATCH bars may be used in center seating position only when the position is designated as a LATCH location in vehicle owners manual and when spacing is 11 inches. Rotate connectors down and point them away from base (diagram 11), unfold load leg from beneath base (diagram 5). Attach connectors to vehicle lower anchors, making sure green is showing on connectors (diagram 12), then adjust stability leg to make contact with vehicle floor until indicator turns green (diagram 7).

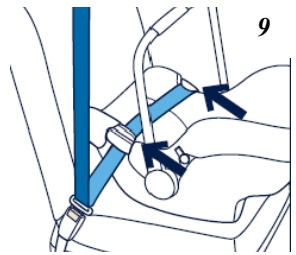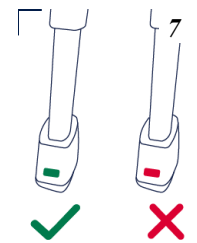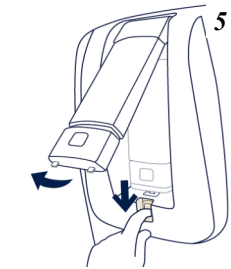

SEE PAGE 3

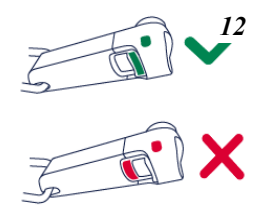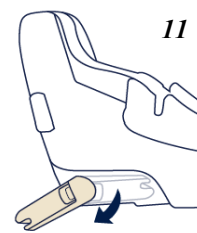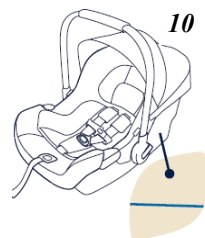

LATCH: (cont.) Base bottom has three retraction positions (diagram 13). Use of retraction may be necessary in some vehicles to allow base to sit against vehicle seat back. If there is a gap between back of base and vehicle seat back **after** connectors are attached, push base into seat until it makes contact with vehicle seat back and a “click” indicates it is locked into a retraction position (diagram 14). A gap is acceptable if base is retracted all the way but is still not fully against the vehicle seat back. Reset retraction by disconnecting rigid connectors and rotating them back to storage position. To release lower connectors, squeeze release buttons on connectors (diagram 15) and pull base off lower connector bars. Restraint comes with optional plastic LATCH guides for use with deeply recessed anchors (diagram 16).

Handle: There are three positions. Handle can be used in any locked position in vehicle; however, handle must not contact any portion of vehicle interior.

Other: Included body support may be used for better fit, but must be removed when child fits without it at approximately 11 pounds.

Head Pillow straps cannot be used in same slots as harness straps, and should only be used in either of the top two sets of slots.

To release carrier from base, squeeze release button on base (diagram 17), then pull carrier up.






This child restraint may be installed using both lower connectors and the safety belt at the same time, unless prohibited by vehicle manufacturer.

Child restraint is compatible with any Pipa series base.

Child restraint expiration date can be found on underside of restraint and base.

Base is certified for use on aircraft with and without base.

No portion of carrier can contact vehicle interior.

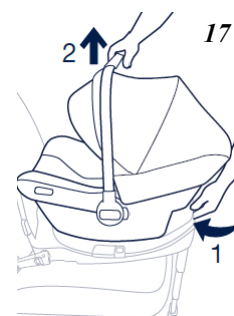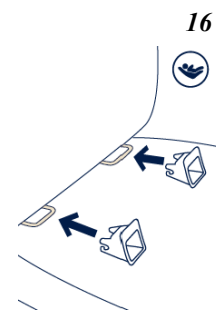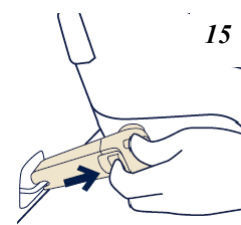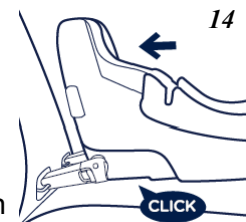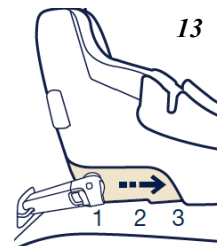

pipa™ rx



nuna®

Designed
around your life



Easy Installation

Our products are designed to make your life easier, so installing this child restraint doesn't require outside assistance.

While we encourage the use of Certified Child Passenger Safety Technicians to ensure you have installed the seat correctly, you can install the restraint in your vehicle without these professionals by carefully reading and following these instructions.

Contents

About PIPA™ rx

Product Information	4
Product Registration	4
Recall Information	5
Warranty	5
Contact	5
Child Usage Requirements	6
Warnings	6
Car Seat Use after a Crash	11
Vehicle Compatibility	12
PIPA™ rx Parts List	16
PIPA RELX™ Base Parts List	18
Product Overview	20

Using PIPA™ rx

Product Use	32
Installation	42
With PIPA RELX™ base	42
Child Restraint Only Install	56
In an Aircraft	62
On a Stroller	62
Accessories	64
Cleaning and Maintenance	66

**IMPORTANT!
KEEP THESE
INSTRUCTIONS
FOR FUTURE
REFERENCE:
READ CAREFULLY**

Product Information

Model Number: _____

Manufactured in (date): _____

Product Registration

Please fill in the above information. The model number and the manufactured in date are located on a label on the bottom of your child restraint. Fill out the prepaid registration postcard attached to the seat pad and mail it today.

Child restraints could be recalled for safety reasons. You must register this restraint to be reached in a recall. Send your name, address, e-mail address if available and the restraint's model number and manufacturing date to:

Nuna Baby Essentials Inc.
70 Thousand Oaks Blvd.
Morgantown, PA 19543

or call 1.855.NUNA.USA

or register online at:

www.nunababy.com

Click on the "Register Car Seat" link on the homepage.

Recall Information

For recall information, call the U.S. Government's Vehicle Safety Hotline at: 1.888.327.4236 (TTY: 1.800.424.9153) or go to <http://www.NHTSA.gov>

Warranty

We have purposely designed our high-quality products so that they can grow with both your child and your family. Because we stand by our product, our gear is covered by a custom warranty per product, starting from the day it was purchased. Please have the proof of purchase, model number and manufactured in date available when you contact us.

For warranty information, please visit: www.nunababy.com/warranty

Contact

For replacement parts, service, or additional warranty questions, please contact our customer service department.

In the USA:

infousa@nunababy.com

www.nunababy.com

1.855.NUNA.USA

Child Usage Requirements

This child restraint is suitable for use with children who meet the following requirements:

Weight: 4 to 32 lb (2 to 14.5 kg)

Height: less than 32 inches (81 cm)

It is recommended to keep your child rear facing as long as possible, until at least 2 years old.

WARNING

DEATH OR SERIOUS INJURY can occur if you fail to follow the warnings, instructions and labels on the child restraint.

A child's safety is your responsibility. **NEVER** leave your child unattended.

Read all instructions before use of this child restraint or installation in a vehicle. In addition, read the vehicle owner's manual for information on child restraint installation.

Use the bottom of the base for instruction manual storage.

Register your child restraint with the manufacturer.

Secure this child restraint with the vehicle's child restraint anchorage system if available, or with a vehicle belt.

This child restraint can **ONLY** be used in a rear facing position when using in a vehicle. The child restraint cannot be properly secured in a forward facing position, and will be unsafe. Use only with children who weigh between 4 and 32 pounds (2 and 14.5 kg) and whose height is 32 inches (81 cm) or less. Exceeding these height and weight limits is unsafe.

Cover the child restraint when your vehicle is parked in sunlight. Parts of a child restraint can become very hot if left in the sun, and can burn a child's skin. Check for hot parts before putting your child in the child restraint.

NEVER use a car seat that has been involved in a moderate to severe crash. **See page 11** to learn what is classified as a moderate to severe crash.

Snugly adjust the belts provided with this child restraint around your child.

If straps are not snugly adjusted, child may be ejected from seat in the event of an accident.

A snug strap should not allow any slack. It lies in a relatively straight line without sagging. It does not press on the child's flesh or push the child's body into an unnatural position.

EXPIRATION DATE Check the label on the underside of the base or child restraint for expiration date information.

FALL HAZARD Child's activity can move carrier. **NEVER** place carrier on counter tops, tables, or any other elevated surface. Always stay within arm's reach whenever carrier is not on floor/ground. Be sure handle locks into position before lifting carrier.

The carrier can fall from a shopping cart. **DO NOT** use on a shopping cart.



STRANGULATION HAZARD

Children have strangled in loose or partially buckled harness straps. Fully restrain the child at all times even when carrier is used outside the vehicle.

SUFFOCATION HAZARD

Infant carrier can roll over on soft surfaces and suffocate child.

NEVER place carrier on beds, sofas, or other soft surfaces.

ALWAYS check child restraint to base connection.

DO NOT allow anyone who has not read the instruction manual to install or use this child restraint.

DO NOT allow child restraint or handle to contact the vehicle interior (side of car door or seat in front) when installed on base.

DO NOT use child restraint if it has frayed or cut harness straps, or is damaged in any way. To find out if damaged parts are replaceable, call 1-855-NUNA-USA.

NEVER modify any part of the child restraint.

DO NOT use any products or accessories with this child restraint unless they are approved by Nuna for use with this child restraint. Doing so may be unsafe and may void the warranty.

DO NOT leave child restraint and base in vehicle when uninstalled, even when unoccupied. In a crash, it could become a projectile and injure other vehicle occupants.

NEVER use clothing or blankets that interfere with providing a properly tightened harness. An unsecured or improperly harnessed child can come out of the restraint during a crash. Place blankets over child **AFTER** harness has been properly tightened.

Only use with Nuna strollers or appropriate Nuna adapters designed for use with other strollers.

Car Seat Use after a Crash

The National Highway Traffic Safety Administration (NHTSA) recommends that car seats be replaced following a moderate or severe crash. Car seats do not automatically need to be replaced following a minor crash.

What defines a minor crash?

A minor crash is one in which **ALL** of the following apply:

- The vehicle was able to be driven away from the crash site.
- The vehicle door nearest the car seat was not damaged.
- None of the passengers in the vehicle sustained any injuries in the crash.
- If the vehicle has air bags, none of the air bags deployed during the crash; and
- There is no visible damage to the car seat.


NEVER use a car seat that has been involved in a moderate to severe crash. Contact Nuna with questions or concerns about your seat.

Information from nhtsa.gov

Vehicle Compatibility

You **MUST** read and understand **ALL** child restraint related instructions and warnings in your vehicle owner's manual to correctly and safely use this child restraint in your vehicle.

This child restraint can **ONLY** be installed on vehicle seats that face forward. **DO NOT** install in seats that face to the sides or rear of the vehicle.

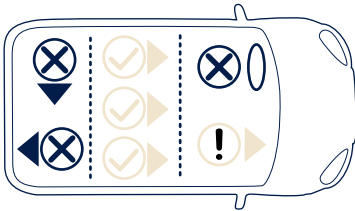

NEVER install this child restraint rear facing in a vehicle seating position with a frontal air bag unless it is turned off.

Airbags inflate with great force and can cause severe injury to a child's neck and spine.

If your vehicle is equipped with passenger side air bags, check your vehicle owner's manual for child restraint installation instructions.

According to accident statistics, children are safer when properly restrained in the rear seating positions than in the front seating positions.

Vehicle Belt Use

Refer to your vehicle owner's manual to determine if the belts in your vehicle lock by switching the seat belt's retractor **OR** if they have a locking latch plate that locks the vehicle's seat belt so they will hold the child restraint tightly without loosening.

(Vehicle Belt Use continued on the next page)

These vehicle belts **CANNOT BE USED** with your child restraint. Install with lower anchors instead.

1 - Motorized Belts (Automatic)

These should not be used unless the shoulder belt can be removed, the lap belt is locked and use is allowed by the vehicle manufacturer.

2 - Dual Retractor Belts

If allowed by the manufacturer, the lap belt only may be used to secure the child restraint in accordance with this manual and the vehicle owner's manual.

3 - Non-Locking (ELR) Lap Belts

This belt locks in a crash or sudden stop and should only be used with a belt shortening clip. Contact your vehicle manufacturer if needed.

4 - Airbag/Inflatable Belts






This belt cannot be used to install this child restraint.

5 - Door Mounted Belts

This belt cannot be used to install this child restraint.



6 - Lap Belts forward of Seat Bight

This belt (Where the seat bottom and seat back meet) should not be used to install this child restraint.

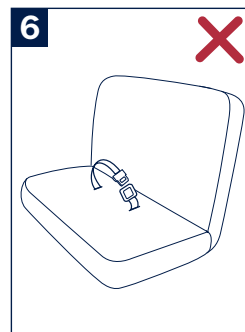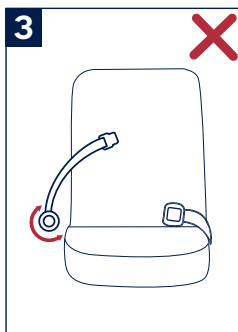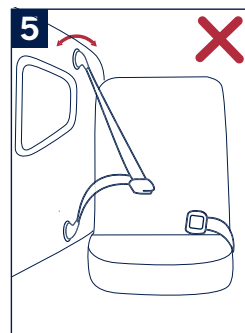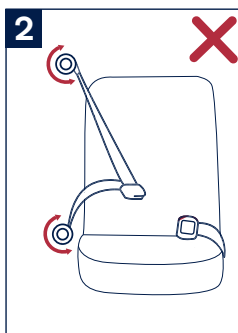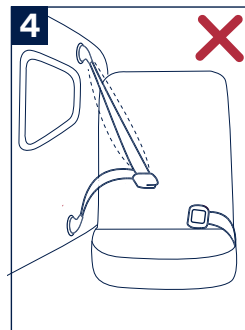

PIPA™ rx Parts List


- 1 Canopy
- 2 Head Support
- 3 Body Support
- 4 Chest Clip
- 5 Buckle and Crotch Belt
- 6 Harness Adjustment Button
- 7 Harness Adjustment Strap
- 8 Lap Belt Guides
- 9 Buckle Holder
- 10 Handle Button
- 11 Stroller Release Button
- 12 Shoulder Pads
- 13 Dream drape™ Zipper
- 14 Canopy Window
- 15 Seat Cover
- 16 Handle
- 17 Shoulder Belt Guide
- 18 Stroller Release Handle
- 19 Harness Slots
- 20 Base Attachment Bars
- 21 Harness Straps
- 22 Splitter Plate

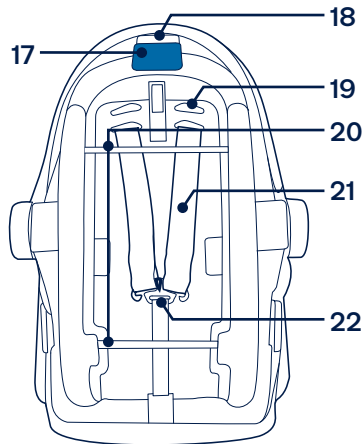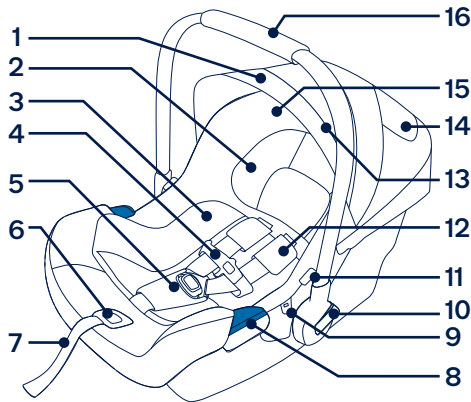

PIPA RELX™ Base Parts List

Make sure all parts are available before assembly. If any part is missing, please contact Nuna (see page 5 for information). No tools are required for assembly.



- 1 Rigid Latch Guides
- 2 Vehicle Belt Lock Off
- 3 Lock Off Release Button
- 4 Belt Positioner
- 5 Rigid Latch (Lower Anchors)
- 6 Rigid Latch Release Button
- 7 Recline Indicator Window
- 8 Recline Adjustment Button
- 9 Child Restraint Release Button
- 10 Stability Leg
- 11 Stability Leg Adjustment Button
- 12 Stability Leg Indicator
- 13 Stability Leg Storage Release Button
- 14 Stability Leg Storage
- 15 Instruction Manual Storage (under Stability Leg)

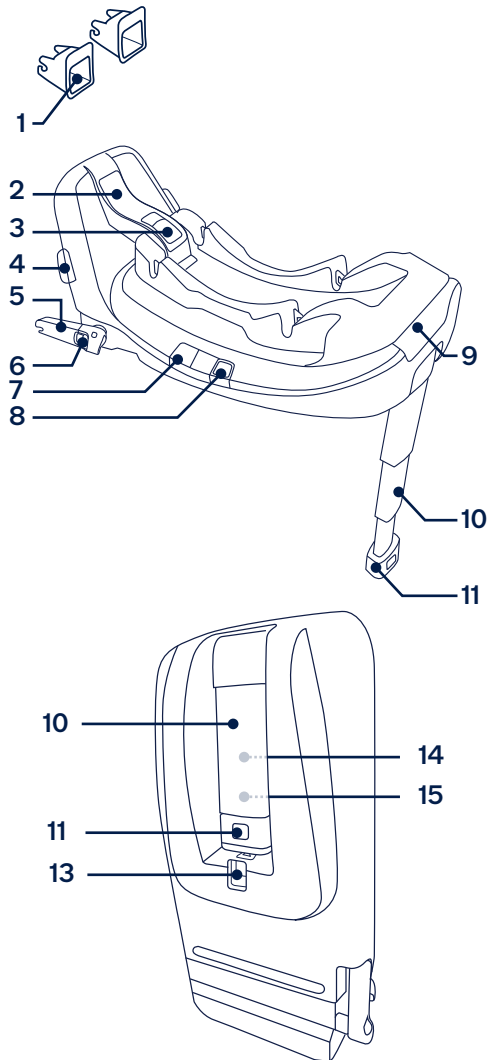

Product Overview



Dream Drape™

- 1 - Unzip the zipper behind the front canopy bow.
- 2 - Pull the Dream drape™ out of the compartment and attach the Dream drape™ to the magnets on each corner to the front of the carrier.

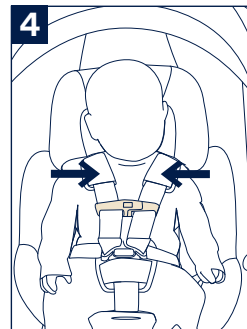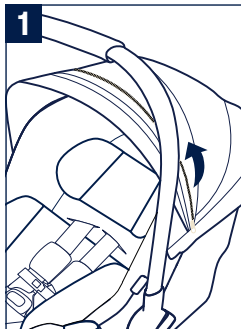

Canopy

- 3 - To remove the canopy, undo the snap on the canopy fabric. Press the button in the canopy mount. Pull the canopy bow out.

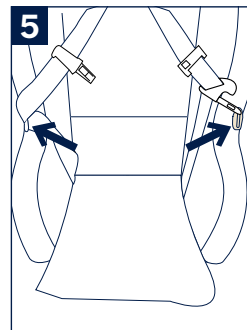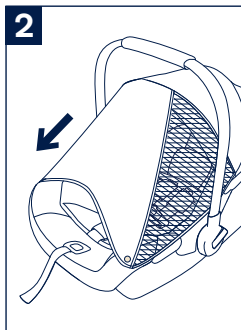


Shoulder Pads

- 4 - Shoulder pads are removable.

Buckle Holders

- 5 - Loosen and unfasten harness. Place buckle tongues in buckle holders.

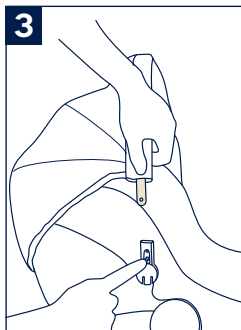




Head and Body Support

The head and body supports can be used as necessary, to provide a snug fit for small babies.

⚠ The head support straps cannot go through the same slots as the harness and should only be used in the top two harness slot positions.

- 1** - To remove the head support, unfasten the hook and loop ends behind the seat fabric.
- 2** - Pull the head support straps through the harness slots.
- 3** - To remove the body support, unbuckle the harness and route the buckle and crotch belt through the bottom slot of the body support.

⚠ The body support can be used for smaller babies, but **MUST** be removed once a snug fit can be achieved without it, at approximately 11 pounds.

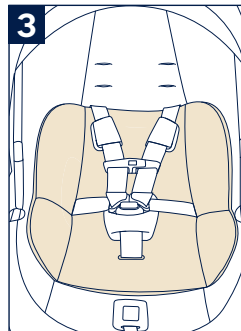
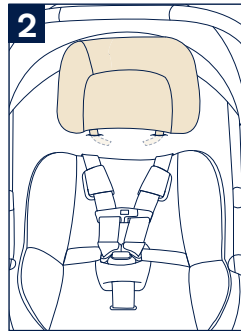
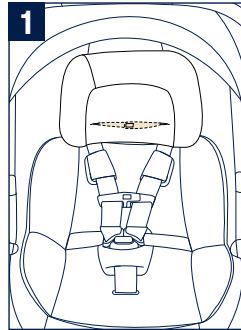


Handle Adjustment

- 1 - The carrier handle can be adjusted to 3 positions.
- 2 - To adjust the handle position, squeeze handle buttons on both sides.
- 3 - Rotate handle until it clicks into any of the 3 positions. Handle can be used in vehicle in any locked position.

⚠ Be sure handle is locked in the carry position before lifting child restraint by handle. An unlocked handle could move unexpectedly, causing injury to child.

Handle **MUST NOT** contact the vehicle interior (side of car or seat in front) when installed.

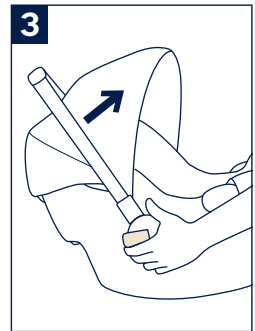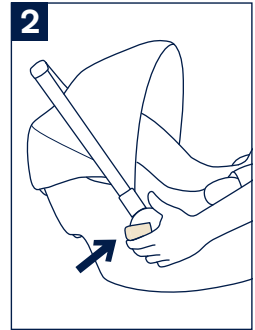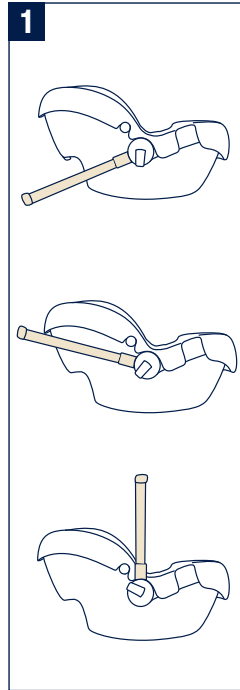

Seat Pad





- 1 - Pull out the fastening pieces under the edge of the seat.

The best way to work this area (as some seat pads feel more tight in this area than others) is to pull the fabric towards the front of the seat at one corner. Once you have one corner out, you can easily work the other side out.

- 2 - Remove the harness from the splitter plate.
- 3 - Remove the seat pad from the stroller release buttons* as shown.






*Feature used only with infant car seat adapters. Infant car seat adapters for strollers sold separately.

- 4 - Grasp the seat pad and pull it out from under one edge of the adjustment button. Work around the adjustment button to release the remainder of the seat pad.

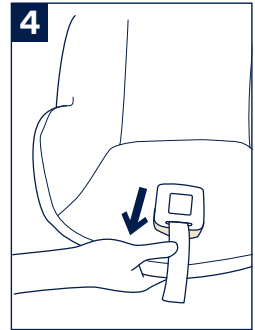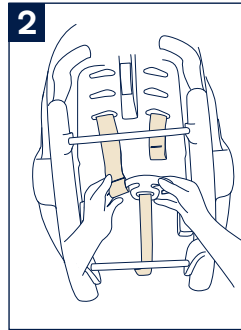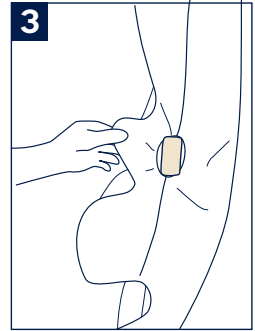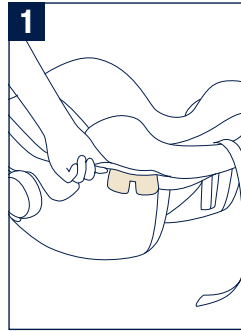

Shoulder Belts

- 1 - Tighten harness to fit snugly on child's shoulders. It is snug if you cannot pinch a fold in the strap horizontally.
- 2 - Harness straps must be at or just below shoulders.
- 3 - To adjust shoulder harness height, first loosen harness by pressing on adjustment button while pulling on the harness straps.
- 4 - Then turn child restraint over and remove one harness loop from metal splitter plate.
- 5 - Pull loose ends of harness out through slots and place in correct slot.


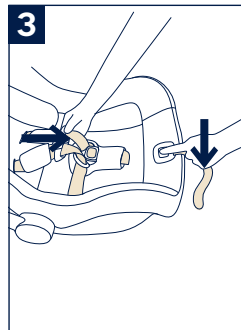
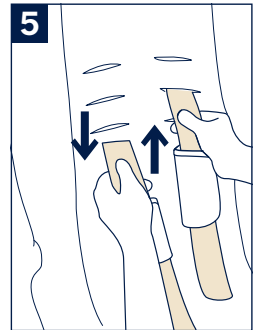
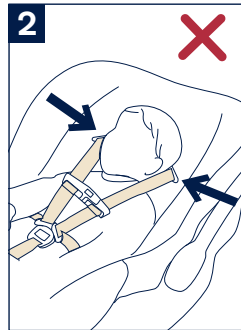
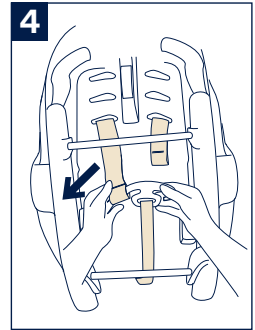
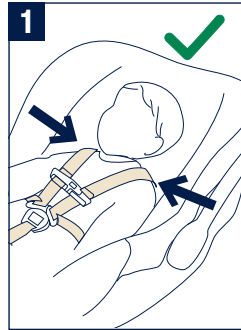


- 1 - Re-attach harness loops to splitter plate.
- 2 - **⚠** Do not allow harness to pass over bars.

Repeat process for second shoulder harness strap.

Crotch Belt

- 3 - Identify crotch belt slot that will achieve a snug fit for your child. Three crotch belt positions are provided to achieve a snug fit as your baby grows. Change crotch belt slot as necessary.
- 4 - The position shown provides the smallest fit. Crotch belt is threaded through rear slot and up through front slot as shown.
- 5 - This position provides a medium fit. Crotch belt is threaded into rear slot as shown.
- 6 - This position provides the largest fit. Crotch belt is threaded through front slot as shown.

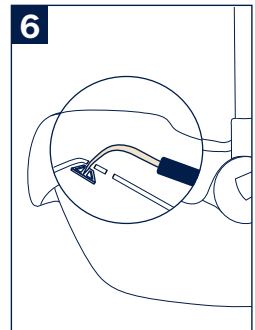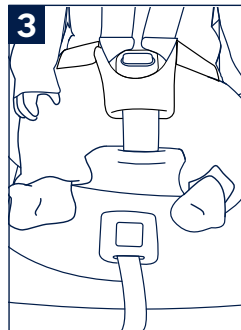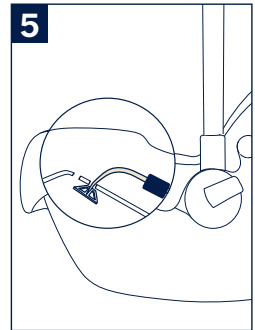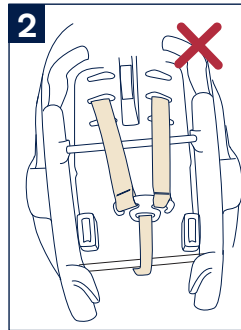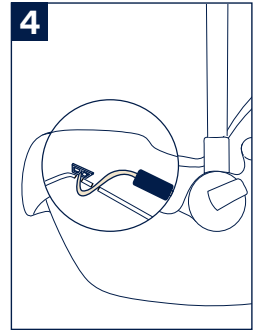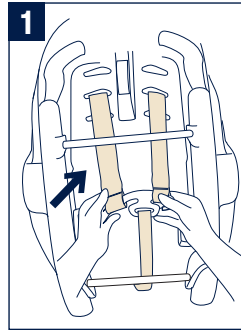

Product Use

- 1 - Top of child's head is at least 1" below top of child restraint.





Securing Child in Child Restraint

- 2 - Loosen harness by pressing on adjustment button while pulling on the harness straps.
- 3 - Press button to release the halves of the chest clip. (1) Separate chest clip and spread harness straps apart. (2) Press buckle button. (3)
- 4 - Place child in child restraint in seated position.
- 5 - The child should be seated against both the back and bottom of the seat with no gap behind the child. Do not allow child to slouch.

Gently guide child's arms through harness loops.

- 6 - Insert buckle tongues into buckle.

(continued on the next page)

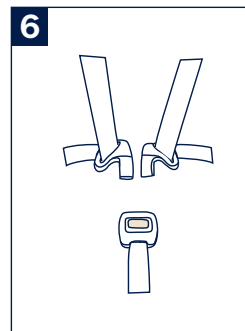
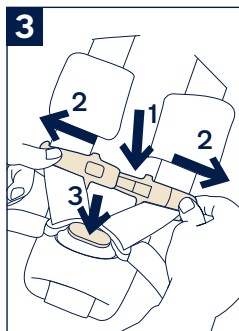
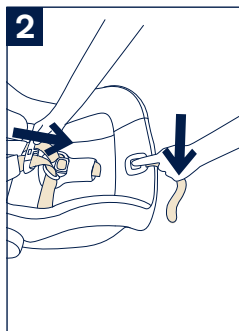
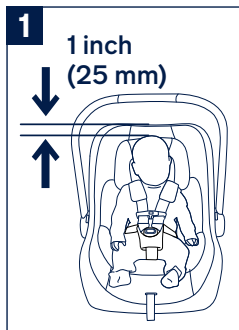


Securing Child in Child Restraint *(continued)*

- 1 - Listen for clicks. Pull on buckle to verify it is latched.
- 2 - Snap the chest clip together and temporarily slide towards buckle for tightening of harness.
- 3 - Tighten harness by pulling on the adjustment strap. Pull any excess harness webbing through the buckle towards the child's shoulders and pull on the adjustment strap. This may need to be repeated several times for proper fit.

Verify that the harness is snug around the child's waist and shoulders.

- 4 - Position the chest clip at child's armpit level.

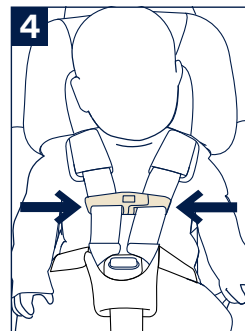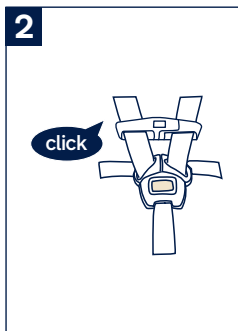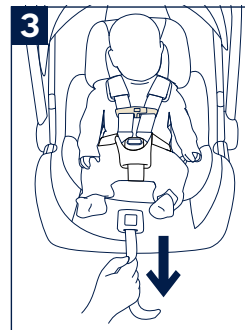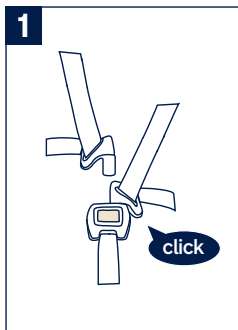

Check that Child is Secure

- Buckle is fastened.
- Harness straps are not twisted.
- Harness is snug – A snug harness cannot be pinched horizontally, and should not allow any slack.
- Chest clip is level with armpits.

(continued on the next page)

Securing Child in Child Restraint *(continued)*


- 1 - **⚠** Harness straps must be at **or just below** child's shoulders to avoid injury. If harness slots need to be moved, see Shoulder Belts section.

Make sure that nothing interferes with the harness.

Make sure harness is snug around child and lays flat.

Serious injury or death could occur to a child that is not secured properly.


If child is not secured properly, child could be ejected in a sudden stop or crash, resulting in serious injury or death.

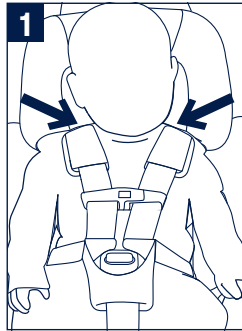





PIPA RELX™ Base Stability Leg

Refer to vehicle owner's manual to determine if stability leg can be used. See page 40 for base installation instructions.

- 1 - Press release button on bottom of base to release the stability leg from storage.
- 2 - Let the stability leg hang over the edge of the vehicle seat. After correctly installing the base on the vehicle seat, press the stability leg adjustment button and extend the stability leg perpendicular to the floor.
- 3 - Extend stability leg far enough that it contacts the floor, the stability leg indicator turns green, and the leg locks into position. Make sure the stability leg is firmly planted on the floor of the vehicle and does not easily slide around.
- 4 - Indicators should show green, meaning the stability leg is properly contacting the floor.

 If the stability leg indicator shows red, the stability leg is not making firm contact with the vehicle floor. Adjust as needed. **Stability leg should be perpendicular to the floor.**

(continued on the next page)

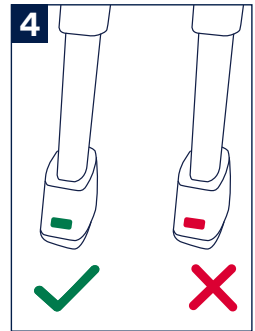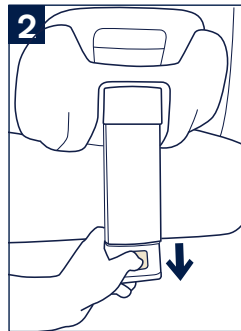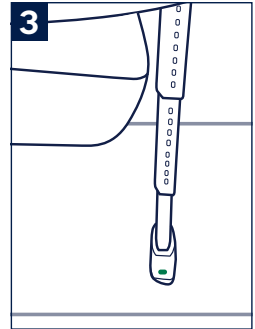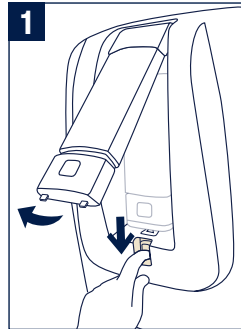



PIPA RELX™ Base Stability Leg (continued)

1 - If stability leg lifts base more than 1 inch off the seat, adjust as needed to close the gap.

! **DO NOT** use stability leg to recline the base. The recline adjustment feature is meant to recline the base.

2 - Always store stability leg when not in use. Press adjustment button to shorten stability leg, then push leg into storage area. Push until the release button clicks into place.

The stability leg can be used or stored for both rigid latch and vehicle belt installation.

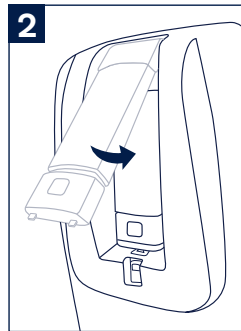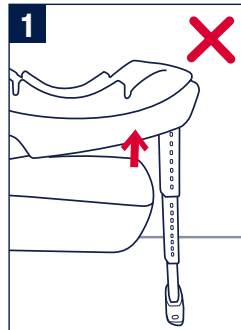


Installation

! If child is not secured properly, child could be ejected in a sudden stop or crash, resulting in serious injury or death.

PIPA RELX™ Base Installation Using Rigid Latch (Lower Anchors)





- 1 - Rotate rigid latch (lower anchors) down and point them away from base.
- 2 - Position base in a forward facing vehicle seat with the stability leg deployed (if using) (p.38).

It is recommended that you use the stability leg, which reduces crash forces in the event of an accident.

- 3 - If preferred, install rigid latch guides on vehicle  lower anchor bars.
- 4 - Grasp rigid latch anchors and push down and forward to connect to vehicle lower anchor bars.

Be sure that the base bottom is firmly seated on vehicle seating surface and there is no gap between the base bottom and vehicle seat.

(continued on the next page)

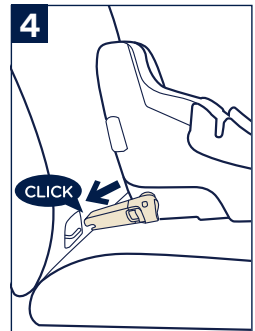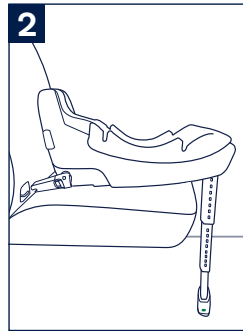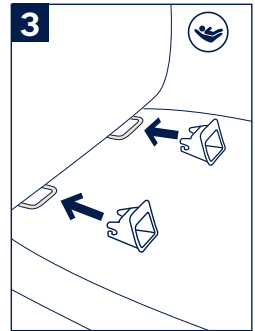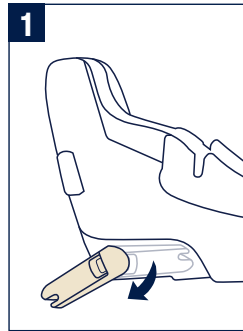

PIPA RELX™ Base Installation Using Rigid Latch (Lower Anchors) *(continued)*





- 1 - Check installation by pulling on the base **AND** seeing that green is indicated on the connectors.
- 2 - **⚠** The rigid latch must be attached and locked onto the vehicle anchor bars with the indicator showing green. If used, the stability leg indicator must show green.

Retracted Positions

- 3 - There are three positions to which the bottom of the base retracts. In some vehicles, this is necessary to allow the base to sit against the vehicle seat back.
- 4 - If there is a gap between the back of the base and the vehicle seat **after** the rigid latch lower anchors have been attached, push on the top and/or back of the base until it touches the vehicle seat and a “click” indicates it’s locked into a retracted position.

A gap is acceptable if the base clicks through **all** retracted positions but is still not fully against the vehicle seat.

(continued on the next page)

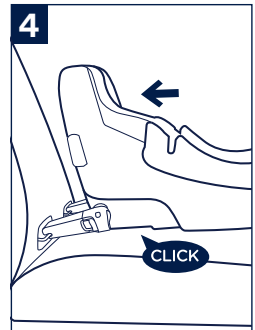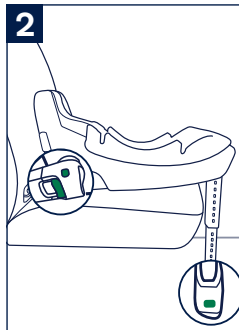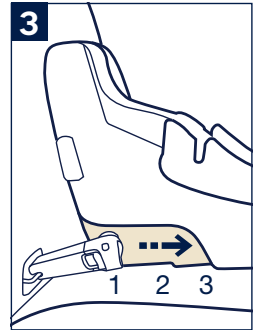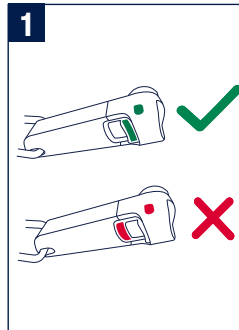




PIPA RELX™ Base Installation Using Rigid Latch (Lower Anchors) *(continued)*

- 1 - You can reset the retracted base back to its original position by unhooking the rigid latch from the vehicle lower anchor bars (p.54) and rotating the rigid latch up into the storage position.

Check the Installation

- 2 - Test the security of the installation **near the rigid latch (a)**, not at **the end of the base (or seat) (b)**.
- Some side-to-side movement on the lower anchor bars could occur. This does not create an unsafe condition if the rigid latch (lower anchors) are attached to these bars on both sides of the base.
 - The rigid latch indicators must show green.
 - The stability leg indicator (if using) must show green.
 - Check that the base is pushed as close to the vehicle seat back as possible and any gap is reduced or eliminated.
 - There should be no gap between the vehicle seat and the bottom of the base.

It is acceptable to install with both rigid latch and the vehicle belt. (See vehicle belt installation on the next page.)

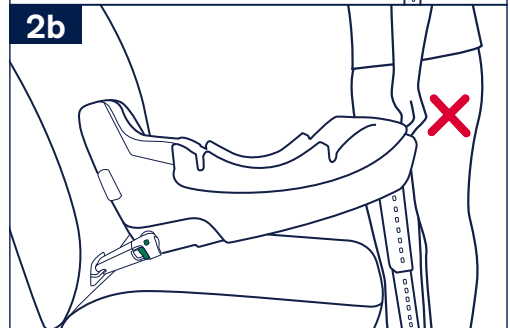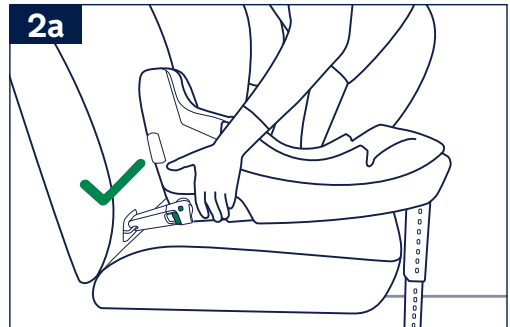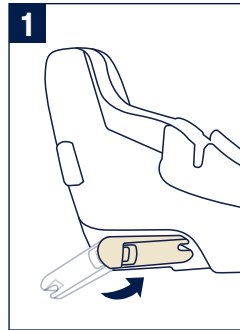







PIPA RELX™ Base Installation Using Lap/Shoulder or Lap Belt Only

- 1 - Position base in a forward facing vehicle seat with the stability leg deployed (if using) (p.38).

It is recommended that you use the stability leg, which reduces crash forces in the event of an accident.

- 2 - Lift the lock off release button.
- 3 - Route the **lap belt** across the area labeled “lap belt here.” Route the **shoulder belt** diagonally across the area labeled “shoulder belt here.”
- 4 - If the vehicle belt comes in contact with the belt positioner on the side of the base, route the belt under the positioner.
- 5 - Buckle the vehicle belt. Both the shoulder **AND** lap belt must be under the vehicle belt lock off and belts must lay flat.
- 6 - While pressing the base firmly downward onto the vehicle seat, (1) tighten the vehicle belt by pulling upward on the shoulder belt (2).

(continued on the next page)

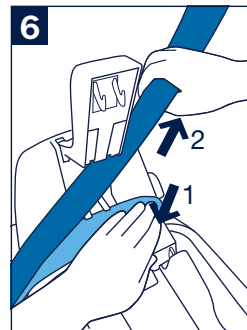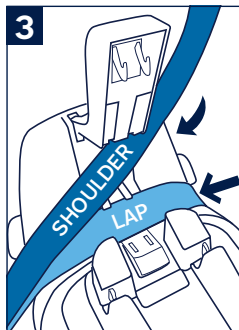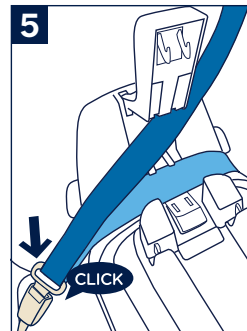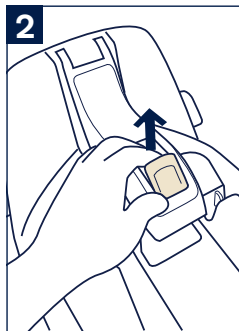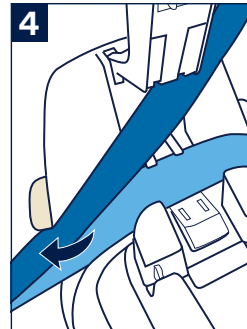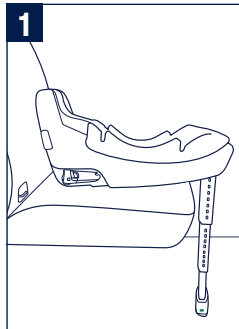




PIPA RELX™ Base Installation Using Lap/Shoulder or Lap Belt Only *(continued)*

1 - With the shoulder belt tight, push down on the lock off to close it.

If your vehicle belt locks (check your owner's manual), lock it **only after** the vehicle belt lock off on the base is closed.

Lap Belt Only

If vehicle has a lap belt only, route the lap belt along the lap belt path under the lock off.

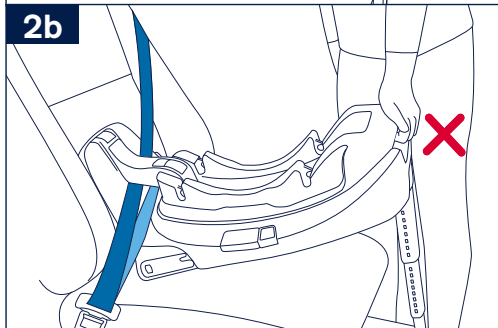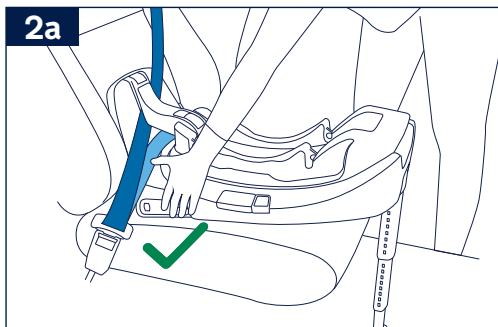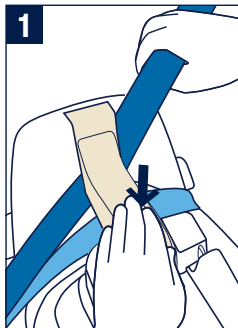

Check the Installation

2 - Test the security of the installation **near the belt path (a)**, not at the **end of the base (or seat) (b)**.

- Base should not move side to side more than 1" **at the belt path**.
- Belt(s) must be tight.
- Belt(s) and buckle must not interfere with attachment of child restraint to base.
- Vehicle belt(s) must lay flat under lock off.
- The stability leg indicator (if using) must show green.
- There should be no gap between the vehicle seat and the bottom of the base.

It is acceptable to install with both rigid latch (p.42) and the vehicle belt.

Attaching Child Restraint to PIPA RELX™ Base

1 - After child is properly secured in child restraint, lower child restraint onto base and listen for a click. Check that child restraint is locked onto the base by pulling on the handle.

⚠ DO NOT allow child restraint or handle to contact the vehicle interior (side of car door or seat in front) when installed on base.

Recline Adjustment

PIPA RELX™ features a recline you can use on the go without uninstalling the seat. Choose a position that matches your child's weight and height.

Recline positions 1 & 2:


4–20 lb, up to 32 inches

Recline positions 3 & 4:

21–32 lb, up to 32 inches

2 - While firmly pushing the recline button all the way down, slide the top of the base. Release the button; if the button does not pop back up, the recline is not locked. Gently push or pull the top of the base until it locks into position.

(continued on the next page)

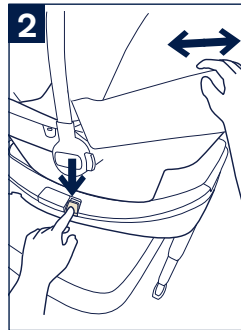

Recline Adjustment (continued)

Check the Installation

- After recline adjustment, check that the child restraint is still securely attached to the base by pulling up on the handle.

Releasing Child Restraint from PIPA RELX™ Base

- 1 - To release the child restraint, squeeze the child restraint release button (1) located on the base, then pull the child restraint up (2).







Uninstalling PIPA RELX™ Base

When Installed with Rigid Latch:

- 2 - Squeeze the rigid latch release buttons.
- 3 - Pull the base off of the bars.
- 4 - Rotate the rigid latch back into storage position.

When Installed with Lap and Shoulder Belt:

- 5 - Lift the lock off release button.
- 6 - Unbuckle the vehicle belt and unroute the shoulder and lap belt from the base. Remove the base.

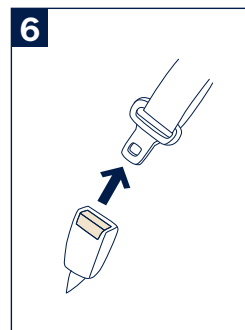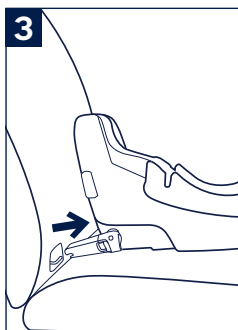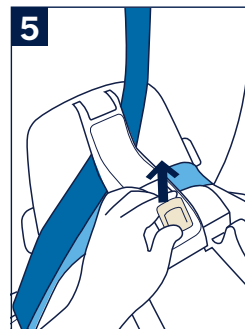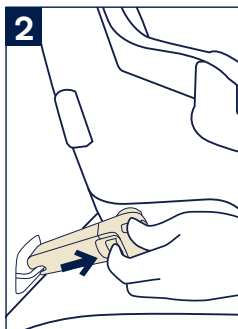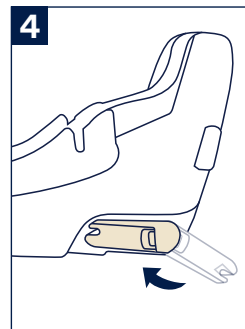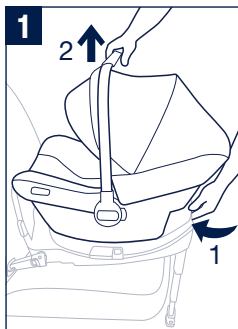

Child Restraint Only Install

This child restraint can be installed without a base in 3 different ways.

1 - Place vehicle in park and on level ground. Position child restraint so that child is facing the rear of the vehicle.

! Only install in a forward facing vehicle seat.





2 - **Option 1:** Route the vehicle lap belt under both lap belt guides. Buckle the vehicle belt. Allow shoulder belt to lay against vehicle seat back as shown.

3 - **Option 2:** Route the vehicle lap belt under both lap belt guides. Buckle the vehicle belt. Route the shoulder belt around the back of the child restraint passing through the blue shoulder belt guide.

4 - **Option 3:** If your vehicle does not have a shoulder belt, the lap belt only can be used.

5 - Adjust the angle of the child restraint. A rolled up towel or foam pool noodle may be used to adjust the amount of recline.


6 - Angle is correct when blue line on child restraint (located on the label on the side of the child restraint) is level with ground. *(continued on the next page)*

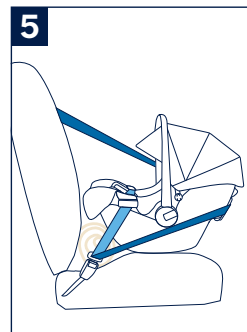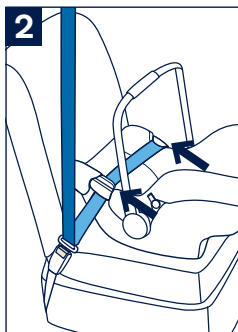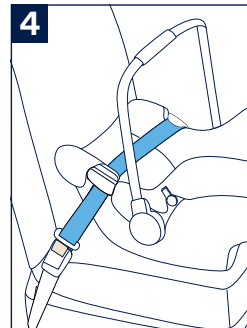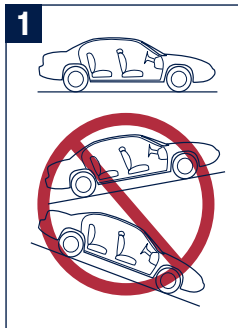

Child Restraint Only Install (continued)

- 1 - Tighten vehicle belt while pushing child restraint firmly into vehicle seat. Lock the vehicle belt. Refer to vehicle owner's manual for instructions. If you cannot lock the vehicle belt, you must use the provided locking clip (p.60).

Tension the vehicle belt as much as possible, checking that it is not loose or twisted.

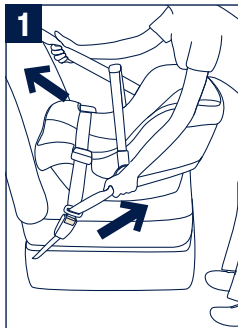

Check Installation

- Blue line must be level with ground.
- Vehicle belt must be buckled, tight and must stay locked.
- Child restraint should be stable and not move side to side more than 1 inch at belt path.



Locking Clip Use

If you determine that you need to use a locking clip, tighten the buckled belt by pushing down hard on the infant child restraint and pulling hard on the shoulder belt.

While pushing down on child restraint, pinch the two straps together behind the buckle tongue. Unbuckle the vehicle belt without allowing it to slip.

- 1 - Connect lap and shoulder belts with locking clip.
- 2 - Reroute vehicle belt if necessary. Check that lap belt does not move by pulling and pushing hard on infant restraint. If belt loosens or lengthens, repeat procedure.

⚠ The locking clip should be 1/2 inch (12.5 mm) from the vehicle buckle.

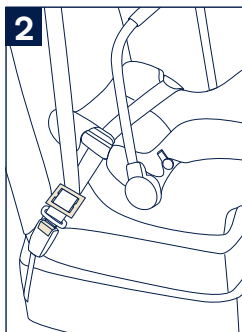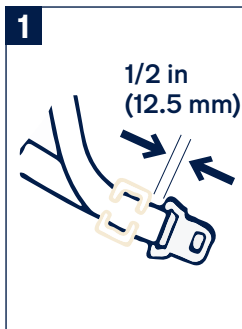

Installation in an Aircraft

Position child restraint so that child is facing the aircraft seat back.

- 1 - Route the aircraft lap belt under both lap belt guides and buckle.
- 2 - Adjust the angle of the child restraint. A rolled up towel or blanket may be used to help adjust the amount of recline (1). The angle is correct when the blue line is level with the floor of the aircraft (2).



Tighten the aircraft belt while pushing the child restraint firmly into the seat.

When installing in an airplane using a base, follow the instructions for vehicle installation with a base using lap belt only (p.48).

This child restraint is certified for use in commercial aircraft with or without the base. Be sure to contact your airline prior to travel to discuss their use policy.

Installation on a Stroller

This infant carrier can attach to Nuna strollers as well as other brands of strollers using adapters (see next page). Adapters are sold separately. Visit nunababy.com for more information.

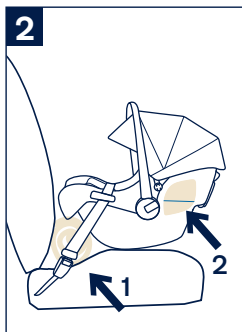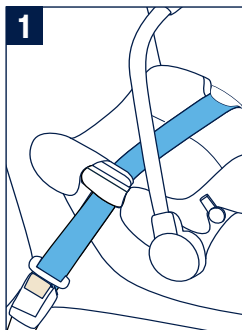

Accessories

PIPA series adapters

The PIPA series can attach to Nuna strollers using adapters. Instructions are included with the adapters, which are sold separately.



1 - Infant Car Seat Ring Adapter

2 - Infant Car Seat Post Adapters

This infant carrier can also attach to other brands of strollers using adapters. Visit nunababy.com for more information.

PIPA series base

PIPA rx is also compatible with the PIPA series base, sold separately.

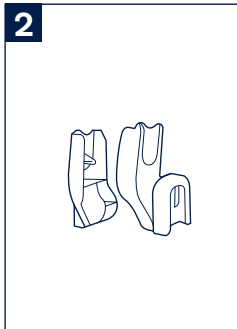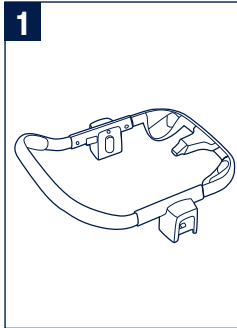

Cleaning and Maintenance

Refer to the care label attached to the soft goods for washing and drying instructions.

DO NOT attempt to remove the foam under the seat pad.

Use only mild detergent, water and a soft cloth to clean the infant carrier shell, handle and harness straps. Air dry.

To clean the buckle: rinse using warm water. **DO NOT** use any soaps, solvents or lubricants. Using anything other than water can cause the buckle to malfunction. Air dry.

Remove the child restraint from the vehicle seat if not in use for a long period of time. Put the infant carrier in a cool, dry place and somewhere your child cannot access it.

It is normal for fabric to color from sunlight and to show wear and tear after a long period of use, even when used normally.

Check regularly if everything functions properly. If any parts are torn, broken, or missing, stop using this product.

Nuna Baby Essentials, Inc. Nuna and all associated logos are trademarks.

